


RIGHT WAY

Everything is hand tighten!!!
NO plyers, NO carbon tape, etc.!!!

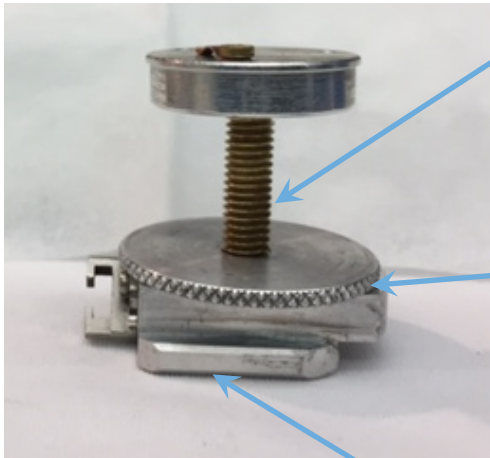

The stud is coming out of
the narrow side of the base

The locking nut is to fix
the length of the stud and
to tight

The wider side of the base is pointing down




The stud is
sticking out on
the bottom side
of the base

Any question? Ask SEM support staff!!!

WRONG WAY



The base is flipped upside down

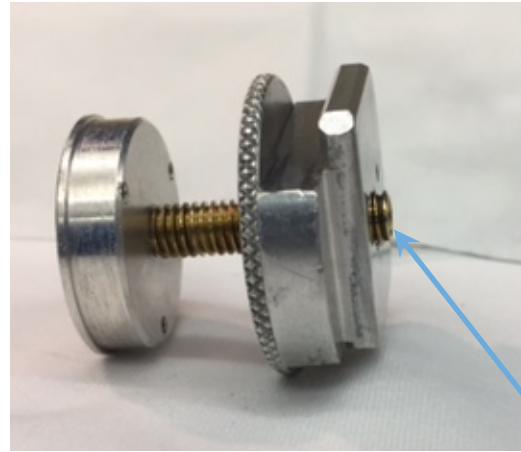

The stud is sticking out on the bottom side of the base

Would you like to make your own design to appear on **the Wall of Shame?**